


ORDER REFERENCE

SR / RL - 600 - PZ - I - g

- b side connection
- g top connection
- non-insulated
- I insulated
- no throttle
- PW throttle controlled from inside
- PZ throttle controlled from outside
- size
- diffuser type
- SR expansion box
- PS spiro transition

PS - Spiro transition

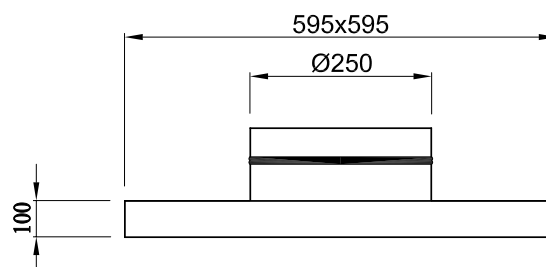

DESCRIPTION

SR/RL are expansion boxes for RL diffusers. They stabilize the airflow and ensure uniform air supply to the diffuser. Expansion boxes connect diffusers with ventilation installation. They are made of zinc-coated sheet, joint by non-welded Click-Clock connection.

Expansion boxes can be connected to the ventilation installation through the side or top.

Boxes can be thermally and acoustically insulated from the inside by K-Flex rubber mat.

Upon customer's request we can make other types of expansion boxes accordingly to provided drawings.

expansion boxes for diffusers RL

INSTALLATION

Expansion boxes SR/RL are designed for installation between the ceiling and underslung ceiling. Prepare an installation hole of a size of 595x595 mm. The box can be mounted onto the ceiling by appropriate hangers (bars, pins...) and installation slings or fixed directly to the underslung ceiling.

Upon customer's request, boxes can be equipped with

1. factory slings
2. a crossbar that allows for installation of the front panel with one central screw

